

PC

ΦD



T

| MODELO(φD-T) | | | | | | | |
|---------------------------|---------|---------|-------------------------|----------|---------------------------|-----------|----------|
| Tubo (Métrico)- Rosca (R) | | | Tubo (Pulgada)-Rosca(R) | | Tubo (Pulgada)-Rosca(NPT) | | |
| PC04-M5 | PC06-04 | PC12-02 | PC1/4-01 | PC3/8-04 | PC5/32-U | PC1/4-N2 | PC1/2-N2 |
| PC04-M6 | PC08-01 | PC12-03 | PC1/4-02 | PC1/2-02 | PC5/32-N1 | PC1/4-N3 | PC1/2-N3 |
| PC04-01 | PC08-02 | PC12-04 | PC1/4-03 | PC1/2-03 | PC5/32-N2 | PC5/16-N2 | PC1/2-N4 |
| PC04-02 | PC08-03 | PC12-03 | PC5/16-01 | PC1/2-04 | PC3/16-U | PC5/16-N3 | |
| PC06-M5 | PC08-04 | PC12-04 | PC5/16-02 | | PC3/16-N1 | PC5/16-N4 | |
| PC06-M6 | PC10-01 | | PC5/16-03 | | PC3/16-N2 | PC3/8-N1 | |
| PC06-01 | PC10-02 | | PC3/8-01 | | PC3/16-N3 | PC3/8-N2 | |
| PC06-02 | PC10-03 | | PC3/8-02 | | PC 1/4U | PC3/8-N3 | |
| PC06-03 | PC10-04 | | PC3/8-03 | | PC1/4N1 | PC3/8-N4 | |

POC

ΦD



T

| MODELO(φD-T) | | | | | |
|---------------------------|-----------|-----------|-------------------------|---------------------------|------------|
| Tubo (Métrico)- Rosca (R) | | | Tubo (Pulgada)-Rosca(R) | Tubo (Pulgada)-Rosca(NPT) | |
| POC 04-M5 | POC 08-01 | POC 12-03 | POC 1/4-01 | POC 5/32-U | POC 3/8-N3 |
| POC 04-M6 | POC 08-02 | POC 12-04 | POC 1/4-02 | POC 5/32-N1 | POC 3/8-N4 |
| POC 04-01 | POC 08-03 | | POC 5/16-01 | POC 1/4-U | POC 1/2-N2 |
| POC 04-02 | POC 08-04 | | POC 5/16-02 | POC 1/4-N1 | POC 1/2-N3 |
| POC 06-M5 | POC 10-01 | | POC 5/16-03 | POC 1/4-N2 | POC 1/2-N4 |
| POC 06-M6 | POC 10-02 | | POC 3/8-02 | POC 5/16-N1 | |
| POC 06-01 | POC 10-03 | | POC 3/8-03 | POC 5/16-N2 | |
| POC 06-02 | POC 10-04 | | POC 3/8-04 | POC 5/16-N3 | |
| POC 06-03 | POC 12-02 | | | POC 3/8-N2 | |

PCF

ΦD



T

| MODELO(φD-T) | | | | | |
|---------------------------|-----------|---------------------------|---------------------------|------------|--|
| Tubo (Métrico)- Rosca (R) | | Tubo (Pulgada)-Thread(RC) | Tubo (Pulgada)-Rosca(NPT) | | |
| PCF 04-01 | PCF 10-01 | PCF 1/4-01 | PCF 5/32-N1 | PCF 3/8-N2 | |
| PCF 04-02 | PCF 10-02 | PCF 1/4-02 | PCF 5/32-N2 | PCF 3/8-N3 | |
| PCF 06-01 | PCF 10-03 | PCF 5/16-01 | PCF 3/16-N1 | PCF 1/2-N2 | |
| PCF 06-02 | PCF 10-04 | PCF 5/16-02 | PCF 3/16-N2 | PCF 1/2-N3 | |
| PCF 06-03 | PCF 12-02 | PCF 3/8-02 | PCF 1/4-N1 | | |
| PCF 08-01 | PCF 12-03 | PCF 3/8-03 | PCF 1/4-N2 | | |
| PCF 08-02 | PCF 12-04 | | PCF 5/16-N1 | | |
| PCF 08-03 | | | PCF 5/16-N2 | | |
| PCF 08-04 | | | PCF 5/16-N3 | | |

PL

ΦD



T

| MODELO(φD-T) | | | | | | | |
|---------------------------|----------|----------|-------------------------|-----------|---------------------------|------------|-----------|
| Tubo (Métrico)- Rosca (R) | | | Tubo (Pulgada)-Rosca(R) | | Tubo (Pulgada)-Rosca(NPT) | | |
| PL 04-M5 | PL 06-04 | PL 12-02 | PL 1/4-01 | PL 3/8-04 | PL 5/32-U | PL 1/4-N2 | PL 1/2-N2 |
| PL 04-M6 | PL 08-01 | PL 12-03 | PL 1/4-02 | PL 1/2-02 | PL 5/32-N1 | PL 1/4-N3 | PL 1/2-N3 |
| PL 04-01 | PL 08-02 | PL 12-04 | PL 1/4-03 | PL 1/2-03 | PL 5/32-N2 | PL 5/16-N1 | PL 1/2-N4 |
| PL 04-02 | PL 08-03 | PL 16-03 | PL 5/16-01 | PL 1/2-04 | PL 3/16-U | PL 5/16-N2 | |
| PL 06-M5 | PL 08-04 | PL 16-04 | PL 5/16-02 | | PL 3/16-N1 | PL 5/16-N3 | |
| PL 06-M6 | PL 10-01 | | PL 5/16-03 | | PL 3/16-N2 | PL 3/8-N1 | |
| PL 06-01 | PL 10-02 | | PL 3/8-01 | | PL 3/16-N3 | PL 3/8-N2 | |
| PL 06-02 | PL 10-03 | | PL 3/8-02 | | PL 1/4-U | PL 3/8-N3 | |
| PL 06-03 | PL 10-04 | | PL 3/8-03 | | PL 1/4-N1 | PL 3/8-N4 | |

PLH



| MODELO(φD-T) | | | | | | | |
|---------------------------|-----------|-----------|-------------------------|------------|---------------------------|-------------|------------|
| Tubo (Métrico)- Rosca (R) | | | Tubo (Pulgada)-Rosca(R) | | Tubo (Pulgada)-Rosca(NPT) | | |
| PLH 04-M5 | PLH 06-04 | PLH 12-02 | PLH 1/4-01 | PLH 3/8-04 | PLH 5/32-U | PLH 1/4-N2 | PLH 1/2-N2 |
| PLH 04-M6 | PLH 08-01 | PLH 12-03 | PLH 1/4-02 | PLH 12-02 | PLH 5/32-N1 | PLH 1/4-N3 | PLH 1/2-N3 |
| PLH 04-01 | PLH 08-02 | PLH 12-04 | PLH 1/4-03 | PLH 12-03 | PLH 5/32-N2 | PLH 5/16-N1 | PLH 1/2-N4 |
| PLH 04-02 | PLH 08-03 | | PLH 5/16-01 | PLH 12-04 | PLH 3/16-U | PLH 5/16-N2 | |
| PLH 06-M5 | PLH 08-04 | | PLH 5/16-02 | | PLH 3/16-N1 | PLH 5/16-N3 | |
| PLH 06-M6 | PLH 10-01 | | PLH 5/16-03 | | PLH 3/16-N2 | PLH 3/8-N1 | |
| PLH 06-01 | PLH 10-02 | | PLH 3/8-01 | | PLH 3/16-N3 | PLH 3/8-N2 | |
| PLH 06-02 | PLH 10-03 | | PLH 3/8-02 | | PLH 1/4-U | PLH 3/8-N3 | |
| PLH 06-03 | PLH 10-04 | | PLH 3/8-03 | | PLH 1/4-N1 | PLH 3/8-N4 | |

PLL



| MODELO(φD-T) | | | | | | | |
|---------------------------|-----------|-----------|-------------------------|--|---------------------------|--|-------------|
| Tubo (Métrico)- Rosca (R) | | | Tubo (Pulgada)-Rosca(R) | | Tubo (Pulgada)-Rosca(NPT) | | |
| PLL 04-M5 | PLL 06-04 | PLL 12-02 | PLL 1/4-01 | | PLL 5/32-U | | PLL 5/16-N2 |
| PLL 04-M6 | PLL 08-01 | PLL 12-03 | PLL 1/4-02 | | PLL 5/32-N1 | | PLL 5/16-N3 |
| PLL 04-01 | PLL 08-02 | PLL 12-04 | PLL 5/16-01 | | PLL 3/16-N1 | | PLL 3/8-N2 |
| PLL 04-02 | PLL 08-03 | | PLL 5/16-02 | | PLL 3/16-N2 | | PLL 3/8-N3 |
| PLL 06-M5 | PLL 08-04 | | PLL 3/8-02 | | PLL 3/16-N3 | | PLL 3/8-N4 |
| PLL 06-M6 | PLL 10-01 | | PLL 3/8-03 | | PLL 1/4-N1 | | PLL 1/2-N2 |
| PLL 06-01 | PLL 10-02 | | | | PLL 1/4-N2 | | PLL 1/2-N3 |
| PLL 06-02 | PLL 10-03 | | | | PLL 1/4-N3 | | PLL 1/2-N4 |
| PLL 06-03 | PLL 10-04 | | | | PLL 5/16-N1 | | |

PB



| MODELO(φD-T) | | | | | | | |
|---------------------------|----------|----------|-------------------------|-----------|---------------------------|------------|-----------|
| Tubo (Métrico)- Rosca (R) | | | Tubo (Pulgada)-Rosca(R) | | Tubo (Pulgada)-Rosca(NPT) | | |
| PB 04-M5 | PB 06-04 | PB 12-02 | PB 1/4-01 | PB 3/8-04 | PB 5/32-U | PB 1/4-N2 | PB 1/2-N2 |
| PB 04-M6 | PB 08-01 | PB 12-03 | PB 1/4-02 | PB 1/2-02 | PB 5/32-N1 | PB 1/4-N3 | PB 1/2-N3 |
| PB 04-01 | PB 08-02 | PB 12-04 | PB 1/4-03 | PB 1/2-03 | PB 5/32-N2 | PB 5/16-N1 | PB 1/2-N4 |
| PB 04-02 | PB 08-03 | PB 16-03 | PB 5/16-01 | PB 1/2-04 | PB 3/16-U | PB 5/16-N2 | |
| PB 06-M5 | PB 08-04 | PB 16-04 | PB 5/16-02 | | PB 3/16-N1 | PB 5/16-N3 | |
| PB 06-M6 | PB 10-01 | | PB 5/16-03 | | PB 3/16-N2 | PB 3/8-N1 | |
| PB 06-01 | PB 10-02 | | PB 3/8-01 | | PB 3/16-N3 | PB 3/8-N2 | |
| PB 06-02 | PB 10-03 | | PB 3/8-02 | | PB 1/4-U | PB 3/8-N3 | |
| PB 06-03 | PB 10-04 | | PB 3/8-03 | | PB 1/4-N1 | PB 3/8-N4 | |

PD



| MODELO(ϕ D-T) | | | | | | | |
|---------------------------|----------|----------|-------------------------|-----------|---------------------------|------------|-----------|
| Tubo (Métrico)- Rosca (R) | | | Tubo (Pulgada)-Rosca(R) | | Tubo (Pulgada)-Rosca(NPT) | | |
| PD 04-M5 | PD 06-04 | PD 12-02 | PD 1/4-01 | PD 3/8-04 | PD 5/32-U | PD 1/4-N2 | PD 1/2-N2 |
| PD 04-M6 | PD 08-01 | PD 12-03 | PD 1/4-02 | PD 1/2-02 | PD 5/32-N1 | PD 1/4-N3 | PD 1/2-N3 |
| PD 04-01 | PD 08-02 | PD 12-04 | PD 1/4-03 | PD 1/2-03 | PD 5/32-N2 | PD 5/16-N1 | PD 1/2-N4 |
| PD 04-02 | PD 08-03 | | PD 5/16-01 | PD 1/2-04 | PD 3/16-U | PD 5/16-N2 | |
| PD 06-M5 | PD 08-04 | | PD 5/16-02 | | PD 3/16-N1 | PD 5/16-N3 | |
| PD 06-M6 | PD 10-01 | | PD 5/16-03 | | PD 3/16-N2 | PD 3/8-N1 | |
| PD 06-01 | PD 10-02 | | PD 3/8-01 | | PD 3/16-N3 | PD 3/8-N2 | |
| PD 06-02 | PD 10-03 | | PD 3/8-02 | | PD 1/4-U | PD 3/8-N3 | |
| PD 06-03 | PD 10-04 | | PD 3/8-03 | | PD 1/4-N1 | PD 3/8-N4 | |

PX



| MODELO(ϕ D-T) | | | | | | | |
|---------------------------|----------|----------|-------------------------|-----------|---------------------------|------------|-----------|
| Tubo (Métrico)- Rosca (R) | | | Tubo (Pulgada)-Rosca(R) | | Tubo (Pulgada)-Rosca(NPT) | | |
| PX 04-M5 | PX 06-04 | PX 12-02 | PX 1/4-01 | PX 3/8-04 | PX 5/32-U | PX 1/4-N2 | PX 1/2-N2 |
| PX 04-M6 | PX 08-01 | PX 12-03 | PX 1/4-02 | PX 1/2-02 | PX 5/32-N1 | PX 1/4-N3 | PX 1/2-N3 |
| PX 04-01 | PX 08-02 | PX 12-04 | PX 1/4-03 | PX 1/2-03 | PX 5/32-N2 | PX 5/16-N1 | PX 1/2-N4 |
| PX 04-02 | PX 08-03 | | PX 5/16-01 | PX 1/2-04 | PX 3/16-U | PX 5/16-N2 | |
| PX 06-M5 | PX 08-04 | | PX 5/16-02 | | PX 3/16-N1 | PX 5/16-N3 | |
| PX 06-M6 | PX 10-01 | | PX 5/16-03 | | PX 3/16-N2 | PX 3/8-N1 | |
| PX 06-01 | PX 10-02 | | PX 3/8-01 | | PX 3/16-N3 | PX 3/8-N2 | |
| PX 06-02 | PX 10-03 | | PX 3/8-02 | | PX 1/4-U | PX 3/8-N3 | |
| PX 06-03 | PX 10-04 | | PX 3/8-03 | | PX 1/4-N1 | PX 3/8-N4 | |

PH



| MODELO(ϕ D-T) | | | | | | |
|---------------------------|----------|----------|-------------------------|--|---------------------------|------------|
| Tubo (Métrico)- Rosca (R) | | | Tubo (Pulgada)-Rosca(R) | | Tubo (Pulgada)-Rosca(NPT) | |
| PH 04-M5 | PH 08-01 | PH 12-04 | PH 1/4-M5 | | PH 5/32-U | PH 5/16-N3 |
| PH 04-M6 | PH 08-02 | | PH 1/4-01 | | PH 5/32-N1 | PH 3/8-N2 |
| PH 04-01 | PH 08-03 | | PH 1/4-02 | | PH 3/16-U | PH 3/8-N3 |
| PH 04-02 | PH 08-04 | | PH 5/16-01 | | PH 3/16-N1 | PH 1/2-N3 |
| PH 06-M5 | PH 10-02 | | PH 5/16-02 | | PH 3/16-N2 | PH 1/2-N4 |
| PH 06-M6 | PH 10-03 | | PH 5/16-03 | | PH 1/4-N1 | |
| PH 06-01 | PH 10-04 | | PH 3/8-02 | | PH 1/4-N2 | |
| PH 06-02 | PH 12-02 | | PH 3/8-03 | | PH 5/16-N1 | |
| PH 06-03 | PH 12-03 | | | | PH 5/16-N2 | |

PHF



| MODELO(φD-T) | | | | | |
|---------------------------|-----------|-----------|-------------------------|---------------------------|-------------|
| Tubo (Métrico)- Rosca (R) | | | Tubo (Pulgada)-Rosca(R) | Tubo (Pulgada)-Rosca(NPT) | |
| PHF 04-M5 | PHF 08-01 | PHF 12-04 | PHF 1/4-M5 | PHF 5/32-U | PHF 5/16-N3 |
| PHF 04-M6 | PHF 08-02 | | PHF 1/4-01 | PHF 5/32-N1 | PHF 3/8-N2 |
| PHF 04-01 | PHF 08-03 | | PHF 1/4-02 | PHF 3/16-U | PHF 3/8-N3 |
| PHF 04-02 | PHF 08-04 | | PHF 5/16-01 | PHF 3/16-N1 | PHF 1/2-N3 |
| PHF 06-M5 | PHF 10-02 | | PHF 5/16-02 | PHF 3/16-N2 | PHF 1/2-N4 |
| PHF 06-M6 | PHF 10-03 | | PHF 5/16-03 | PHF 1/4-N1 | |
| PHF 06-01 | PHF 10-04 | | PHF 3/8-02 | PHF 1/4-N2 | |
| PHF 06-02 | PHF 12-02 | | PHF 3/8-03 | PHF 5/16-N1 | |
| PHF 06-03 | PHF 12-03 | | | PHF 5/16-N2 | |

PGJ



| MODELO(φD1-φD2) | | |
|---------------------------|-------------------------|---------------------------|
| Tubo (Métrico)- Rosca (R) | Tubo (Pulgada)-Rosca(R) | Tubo (Pulgada)-Rosca(NPT) |
| PGJ 06-04 | PGJ 08-1/4 | PGJ 1/4-5/32 |
| PGJ 08-04 | PGJ 10-1/4 | PGJ 5/16-5/32 |
| PGJ 08-06 | PGJ 10-5/16 | PGJ 5/16-1/4 |
| PGJ 10-06 | PGJ 12-1/4 | PGJ 3/8-1/4 |
| PGJ 10-08 | PGJ 12-5/16 | PGJ 3/8-5/16 |
| PGJ 12-06 | PGJ 12-3/8 | PGJ 1/2-1/4 |
| PGJ 12-08 | | PGJ 1/2-5/16 |
| PGJ 12-10 | | PGJ 1/2-3/8 |

PU



| MODELO(φD) | |
|----------------|----------------|
| Tubo (Métrico) | Tubo (Pulgada) |
| PU 04 | PU 5/32 |
| PU 06 | PU 3/16 |
| PU 08 | PU 1/4 |
| PU 10 | PU 5/16 |
| PU 12 | PU 3/8 |
| PU 16 | PU 1/2 |

PV



| MODELO(φD) | |
|----------------|----------------|
| Tubo (Métrico) | Tubo (Pulgada) |
| PV 04 | PV 5/32 |
| PV 06 | PV 3/16 |
| PV 08 | PV 1/4 |
| PV 10 | PV 5/16 |
| PV 12 | PV 3/8 |
| PV 16 | PV 1/2 |

PE



| MODELO(φD) | |
|----------------|----------------|
| Tubo (Métrico) | Tubo (Pulgada) |
| PE 04 | PE 5/32 |
| PE 06 | PE 3/16 |
| PE 08 | PE 1/4 |
| PE 10 | PE 5/16 |
| PE 12 | PE 3/8 |
| PE 16 | PE 1/2 |

PY



| MODELO(φD) | |
|----------------|----------------|
| Tubo (Métrico) | Tubo (Pulgada) |
| PY 04 | PY 5/32 |
| PY 06 | PY 3/16 |
| PY 08 | PY 1/4 |
| PY 10 | PY 5/16 |
| PY 12 | PY 3/8 |
| | PY 1/2 |

PG



| MODELO(φD1-φD2) | |
|-----------------|----------------|
| Tubo (Métrico) | Tubo (Pulgada) |
| PG 08-04 | PG 3/16-5/32 |
| PG 08-06 | PG 1/4-5/32 |
| PG 10-08 | PG 1/4-3/16 |
| PG 12-10 | PG 5/16-1/4 |
| PG 16-12 | PG 3/8-5/16 |
| | PG 1/2-3/8 |

PW



| MODELO(φD1-φD2) | |
|-----------------|----------------|
| Tubo (Métrico) | Tubo (Pulgada) |
| PW 08-04 | PW 3/16-5/32 |
| PW 08-06 | PW 1/4-5/32 |
| PW 10-08 | PW 1/4-3/16 |
| PW 12-10 | PW 5/16-1/4 |
| | PW 3/8-5/16 |
| | PW 1/2-3/8 |

PEG



| MODELO(φD1-φD2) | |
|-----------------|----------------|
| Tubo (Métrico) | Tubo (Pulgada) |
| PEG 06-04 | PEG 1/4-5/32 |
| PEG 08-06 | PEG 5/16-1/4 |
| PEG 10-08 | PEG 3/8-5/16 |
| PEG 12-10 | PEG 1/2-3/8 |
| PEG 16-12 | |

PM



| MODELO(φD) | |
|----------------|----------------|
| Tubo (Métrico) | Tubo (Pulgada) |
| PM 04 | PM 5/32 |
| PM 06 | PM 3/16 |
| PM 08 | PM 1/4 |
| PM 10 | PM 5/16 |
| PM 12 | PM 3/8 |
| | PM 1/2 |

PLF



| MODELO(φD-T) | | | | |
|---------------------------|-----------|-----------|---------------------------|------------|
| Tubo (Métrico)-Thread(RC) | | | Tubo (Pulgada)-Rosca(NPT) | |
| PLF 04-M5 | PLF 08-01 | PLF 12-03 | PLF 5/32-N1 | PLF 3/8-N3 |
| PLF 04-M6 | PLF 08-02 | PLF 12-04 | PLF 3/16-N1 | PLF 1/2-N3 |
| PLF 04-01 | PLF 08-03 | | PLF 3/16-N2 | PLF 1/2-N4 |
| PLF 04-02 | PLF 08-04 | | PLF 1/4-N1 | |
| PLF 06-M5 | PLF 10-01 | | PLF 1/4-N2 | |
| PLF 06-M6 | PLF 10-02 | | PLF 5/16-N1 | |
| PLF 06-01 | PLF 10-03 | | PLF 5/16-N2 | |
| PLF 06-02 | PLF 10-04 | | PLF 5/16-N3 | |
| PLF 06-03 | PLF 12-02 | | PLF 3/8-N2 | |

PMF



| MODELO(φD-T) | | | |
|---------------------------|-----------|---------------------------|------------|
| Tubo (Métrico)-Thread(RC) | | Tubo (Pulgada)-Rosca(NPT) | |
| PMF 04-01 | PMF 10-01 | PMF 5/32-N1 | PMF 3/8-N3 |
| PMF 04-02 | PMF 10-02 | PMF 3/16-N1 | PMF 1/2-N3 |
| PMF 06-01 | PMF 10-03 | PMF 3/16-N2 | PMF 1/2-N4 |
| PMF 06-02 | PMF 10-04 | PMF 1/4-N1 | |
| PMF 06-03 | PMF 12-02 | PMF 1/4-N2 | |
| PMF 08-01 | PMF 12-03 | PMF 5/16-N1 | |
| PMF 08-02 | PMF 12-04 | PMF 5/16-N2 | |
| PMF 08-03 | | PMF 5/16-N3 | |
| PMF 08-04 | | PMF 3/8-N2 | |



| MODEL(φD) | |
|---------------|-------------|
| Tube (Metric) | Tube (Inch) |
| PYJ 04 | PYJ 5/32 |
| PYJ 06 | PYJ 3/16 |
| PYJ 08 | PYJ 1/4 |
| PYJ 10 | PYJ 5/16 |
| PYJ 12 | PYJ 3/8 |
| | PYJ 1/2 |
| | |
| | |
| | |



| Tube (Metric) | Tube(Inch) |
|---------------|--------------|
| PWJ 06-04 | PWJ 1/4-5/32 |
| PWJ 08-06 | PWJ 5/16-1/4 |
| PWJ 10-08 | PWJ 3/8-5/16 |
| PWJ 12-10 | PWJ 1/2-3/8 |
| | |
| | |
| | |
| | |



| MODEL(φD) | |
|---------------|-------------|
| Tube (Metric) | Tube (Inch) |
| PIJ 04 | PIJ 5/32 |
| PIJ 06 | PIJ 3/16 |
| PIJ 08 | PIJ 1/4 |
| PIJ 10 | PIJ 5/16 |
| PIJ 12 | PIJ 3/8 |
| PIJ 16 | PIJ 1/2 |
| | |
| | |
| | |



| MODEL(φD1-φD2) | |
|----------------|---------------|
| Tube (Metric) | Tube(Inch) |
| PIG 06-04 | PIG 3/16-5/32 |
| PIG 08-06 | PIG 1/4-5/32 |
| PIG 10-08 | PIG 1/4-3/16 |
| PIG 12-10 | PIG 5/16-1/4 |
| PIG 16-12 | PIG 3/8-5/16 |
| | PIG 1/2-3/8 |
| | |
| | |
| | |



| MODEL(φD1-φD2-T) | |
|------------------|------------------|
| Tube (Metric) | Tube(Inch) |
| PKD 06-04-01 | PKD 3/16-5/32-N1 |
| PKD 08-04-02 | PKD 1/4-5/32-N1 |
| PKD 08-06-02 | PKD 5/16-5/32-N2 |
| PKD 10-08-03 | PKD 5/16-3/16-N2 |
| | PKD 5/16-1/4-N2 |
| | PKD 3/8-5/16-N3 |
| | |
| | |
| | |



| MODEL(φD) | |
|--------------|------------|
| Tube(Metric) | Tube(Inch) |
| PK 04 | PK 5/32 |
| PK 06 | PK 3/16 |
| PK 08 | PK 1/4 |
| | PK 5/16 |
| | |
| | |
| | |
| | |



| MODEL(φD1-φD2) | |
|----------------|---------------|
| Tube (Metric) | Tube(Inch) |
| PKG 06-04 | PKG 3/16-5/32 |
| PKG 08-04 | PKG 1/4-5/32 |
| PKG 08-06 | PKG 5/16-5/32 |
| PKG 10-06 | PKG 5/16-3/16 |
| PKG 10-08 | PKG 5/16-1/4 |
| | PKG 3/8-1/4 |
| | |
| | |
| | |



| MODEL(φD1-φD2) | |
|----------------|---------------|
| Tube (Metric) | Tube(Inch) |
| PKJ 06-04 | PKJ 3/16-5/32 |
| PKJ 08-04 | PKJ 1/4-5/32 |
| PKJ 08-06 | PKJ 5/16-5/32 |
| PKJ 10-06 | PKJ 5/16-3/16 |
| PKJ 10-08 | PKJ 5/16-1/4 |
| | PKJ 3/8-1/4 |
| | |
| | |
| | |